
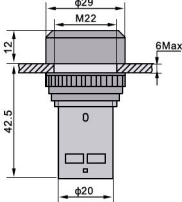 
 

 
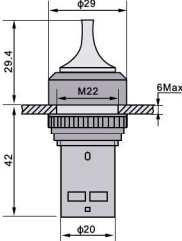 
 

 
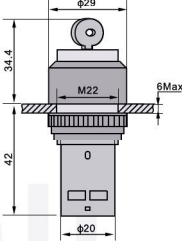 
 


 

 
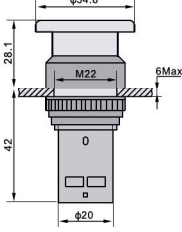 

 
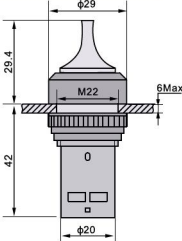 
 


# SB7

## Push button series



www.xindali.com

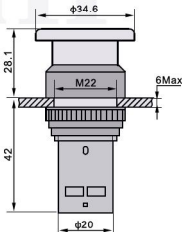Push button	Description	Contact	Circuit	Color	Type	Contour
 <b>SB7-CA35</b>	Spring return			<ul style="list-style-type: none"> <li>● Black</li> <li>● Green</li> <li>● Red</li> <li>● Yellow</li> </ul>	<ul style="list-style-type: none"> <li>SB7-CA25</li> <li>SB7-CA35</li> <li>SB7-CA45</li> <li>SB7-CA55</li> </ul>	
	Flush pushbutton	NO+NC		<ul style="list-style-type: none"> <li>● Green</li> <li>● Red</li> <li>● Yellow</li> </ul>	<ul style="list-style-type: none"> <li>SB7-CAL35</li> <li>SB7-CAL45</li> <li>SB7-CAL55</li> </ul>	
 <b>SB7-CD25</b>	Selector switch standard handle two position stay put	NO+NC		● Black	SB7-CD25	
		NO+NO			SB7-CD33	
 <b>SB7-CG25</b>	Key switch standard handle two position stay put	NO+NC		● Black	SB7-CG25	
		NO+NO			SB7-CG33	
 <b>SB7-CC45</b>	Emergency push button spring return	NO+NC		<ul style="list-style-type: none"> <li>● Green</li> <li>● Red</li> </ul>	<ul style="list-style-type: none"> <li>SB7-CC35</li> <li>SB7-CC45</li> </ul>	
 <b>SB7-CS545</b>	Emergency push button turn to release	NO+NC		● Red	SB7-CS545	
 <b>SB7-CK2561</b>	Selector switch with lamp standard handle two position stay put LED	NO		<ul style="list-style-type: none"> <li>● Green/PG</li> <li>● Yellow</li> </ul>	<ul style="list-style-type: none"> <li>SB7-CK2361</li> <li>SB7-CK2561</li> </ul>	
		NC		● Red	SB7-CK2462	

Sb7 Series


Push button	Description	Contact	Circuit	Color	Type	Contour
-------------	-------------	---------	---------	-------	------	---------




SB7-CK2465

Two position stay put  
Selector switch with lamp standard handle LED  
Three position stay put

 NO+NC

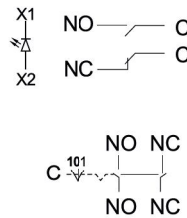

 
- Green/PG SB7-CK2365
- Yellow SB7-CK2565
- Red SB7-CK2465
- Green/PG SB7-CK3365
- Yellow SB7-CK3565
- Red SB7-CK3465

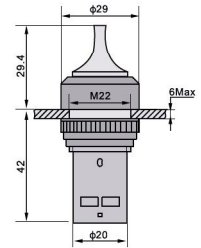


SB7-CW3462

Flush pushbutton with lamp LED

 NO

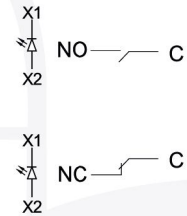

 - White/PW SB7-CW3161
- Green/PG SB7-CW3361
- Yellow SB7-CW3561
- Pure Blue SB7-CW3661
- Red SB7-CW3462

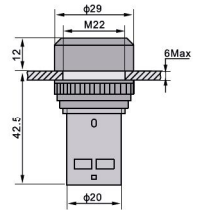


SB7-CW3465

Spring return  
Flush pushbutton with lamp LED  
push to lock  
push to release


NO

+

 NC

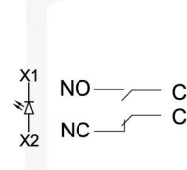

 - Green/PG SB7-CW3365
- Yellow SB7-CW3565
- Pure Blue SB7-CW3665
- Red SB7-CW3465
- Green/PG SB7-CWL3365
- Yellow SB7-CWL3565
- Red SB7-CWL3465

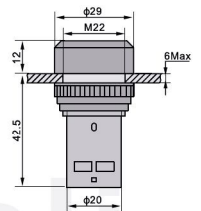


SB7-CWM31


mushroom pushbutton with lamp push-pull LED

NO

 NC

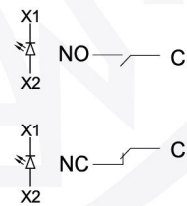


- Green/PG SB7-CWM31
- Red SB7-CWM42

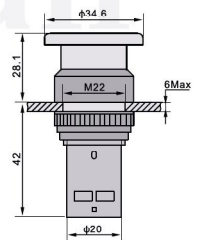 


SB7-EV64

Illumination installation base  
Direct Type BA9S bulb (supply)  
Neon (BA9S) LED

 220~240V



 - White/PW SB7-EV61
- Green/PG SB7-EV63
- Red SB7-EV64
- Yellow SB7-EV65
- Pure Blue SB7-EV66

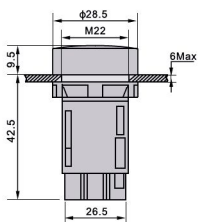


SB7-EA42

Pushbutton spring return

NO

NC

 NO+NC

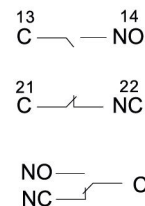

- Black SB7-EA21
- Green SB7-EA31
- Red SB7-EA42
- Black SB7-EA25
- Green SB7-EA35
- Red SB7-EA45

